


ARIES CORNER HEATER- Installation Diagram for Saunova 2.0 Control (Ni2)

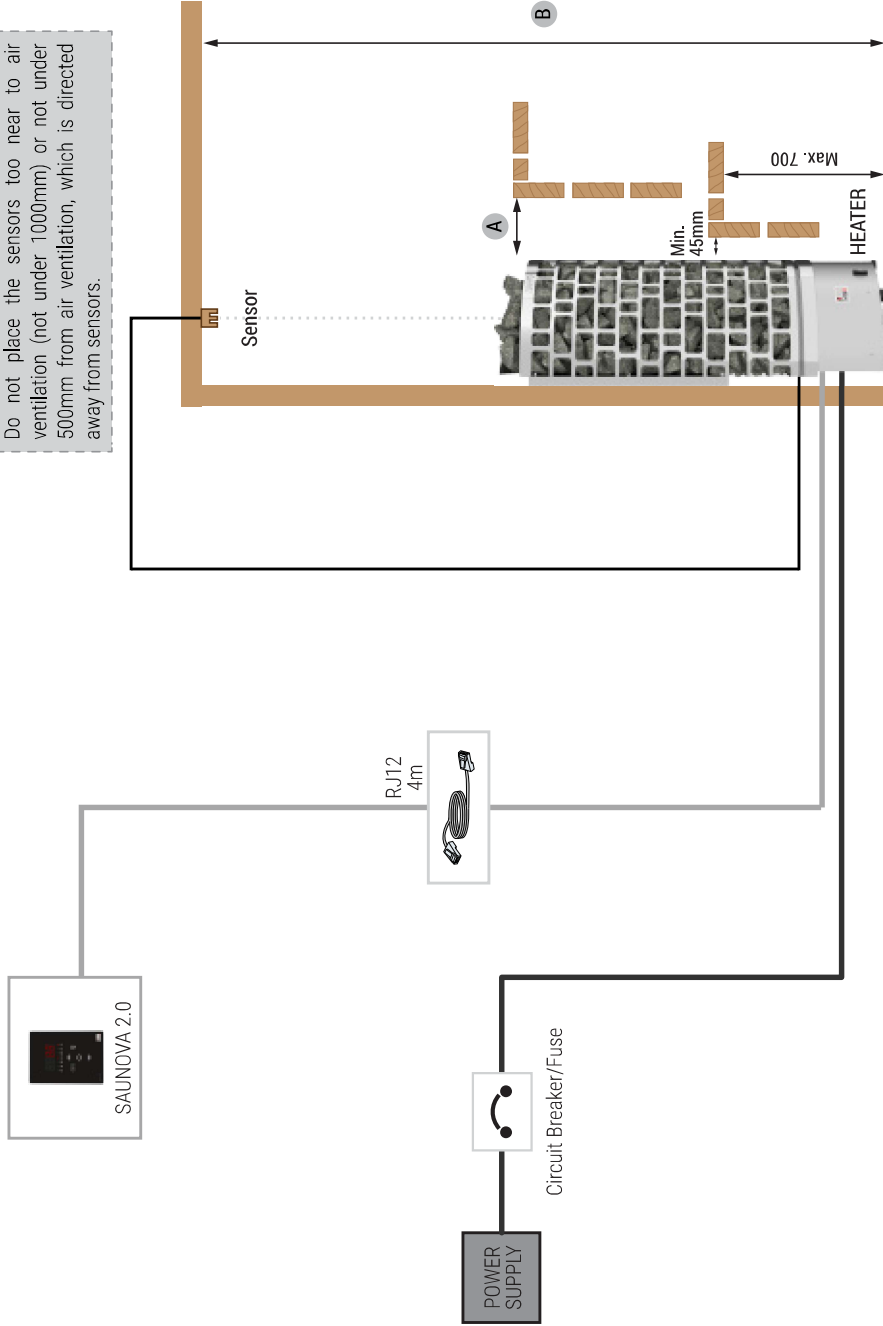

NOTE!
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.



Minimum Safety Distances

Heater Model	A	B
ARI3-45Ni2-WL	100	1900
ARI3-60Ni2-WL	100	1900
ARI3-75Ni2-WL	100	1900
ARI3-90Ni2-WL	100	1900

