 

 

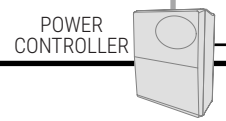




CUBOS HEATER- Installation Diagram for Separate Control (NS)

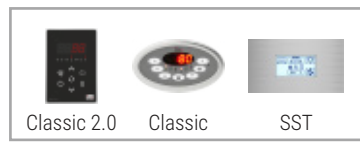


NOTE!
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

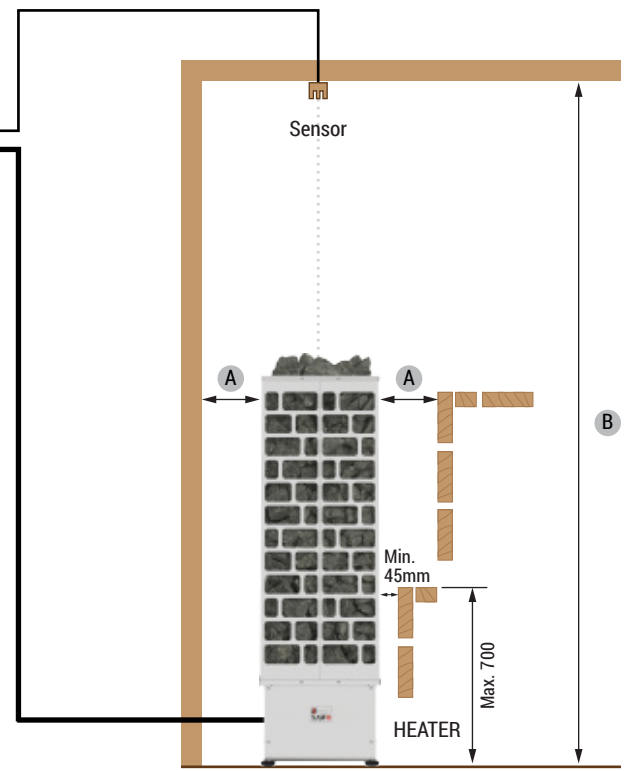


Minimum Safety Distances


Heater Model	A	AA	B
CUB3-45NS	100	100	1900
CUB3-60NS	100	100	1900
CUB3-75NS	100	135	1900
CUB3-90NS	125	135	1900

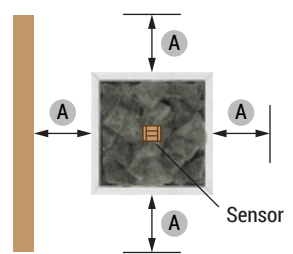

Middle Installation

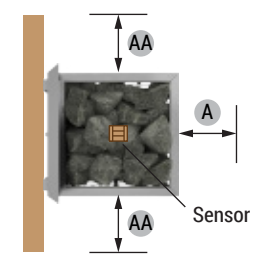

Wall Installation with Protective Cover

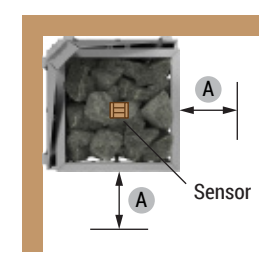


Corner Installation with Protective Cover

TOP VIEW




CUBOS HEATER- Installation Diagram for Saunova 2.0 Control (Ni2)

NOTE!
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

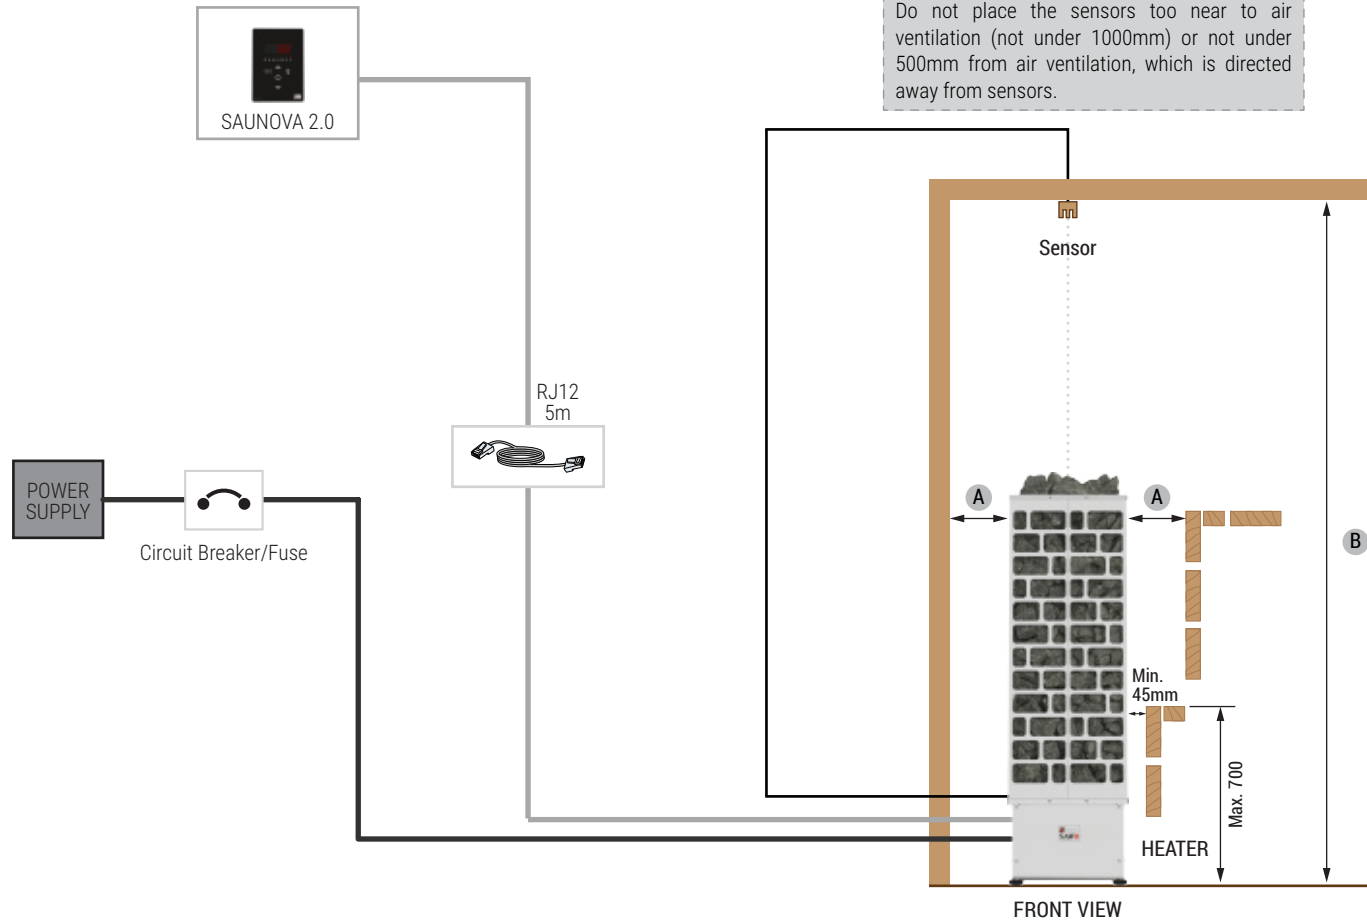


Minimum Safety Distances

Heater Model	A	AA	B
CUB3-45Ni2	100	100	1900
CUB3-60Ni2	100	100	1900
CUB3-75Ni2	100	135	1900
CUB3-90Ni2	125	135	1900

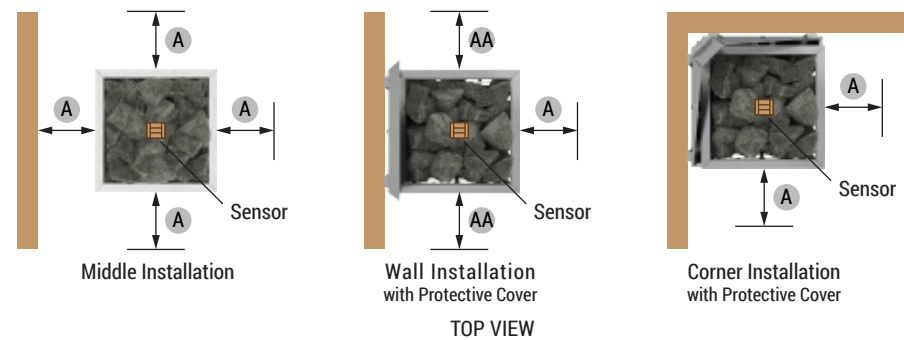



CUBOS HEATER- Installation Diagram for Built-in Control (NB)

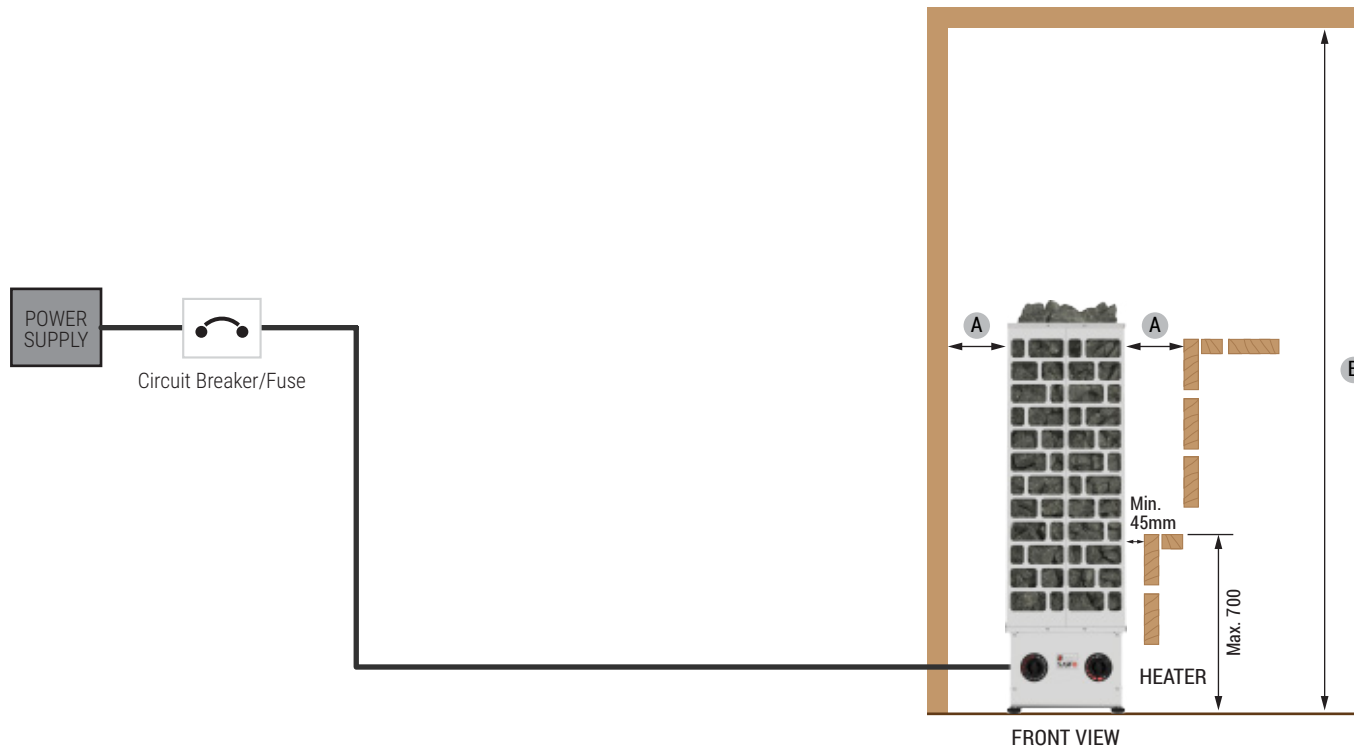

Minimum Safety Distances

Heater Model	A	AA	B
CUB3-45NB	100	100	1900
CUB3-60NB	100	100	1900
CUB3-75NB	100	135	1900
CUB3-90NB	125	135	1900

