




CONNECTION - SCHEME

CUPBOARD KITCHEN SKM

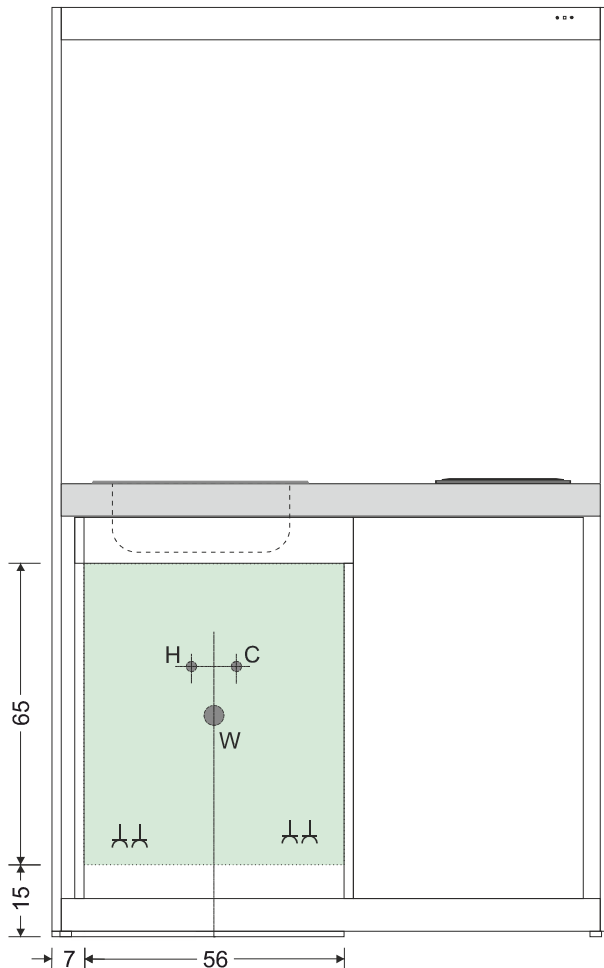

 = Installation area

 = Outlets 230V upon quantity of appliances within the bounds of the installation area

H = Hot water connection

C = Cold water connection

A = Waste water connection

Scheme is connection advice. Modifications according upon structural conditions are possible.

Integrated safety switch (door switch-off):
1x 16 A for hob upon 3500W
1x 16 A for microwave/ light
(1 socket per circuit)

Direct circuit (without door switch):
1x 16 A for fridge/ dishwasher
(1 socket per appliances)



Important notice!!!




Figure with hotplates right bowl left. Please check before installation, which side of hotplates or bowl you have and install plugs reverse left to right accordingly.

Subsequent complaints are not accepted!

We recommend the installation of your kitchen by a plumbing or electrical specialist

CONNECTION SCHEME

MINIKITCHEN MP - MK - ME

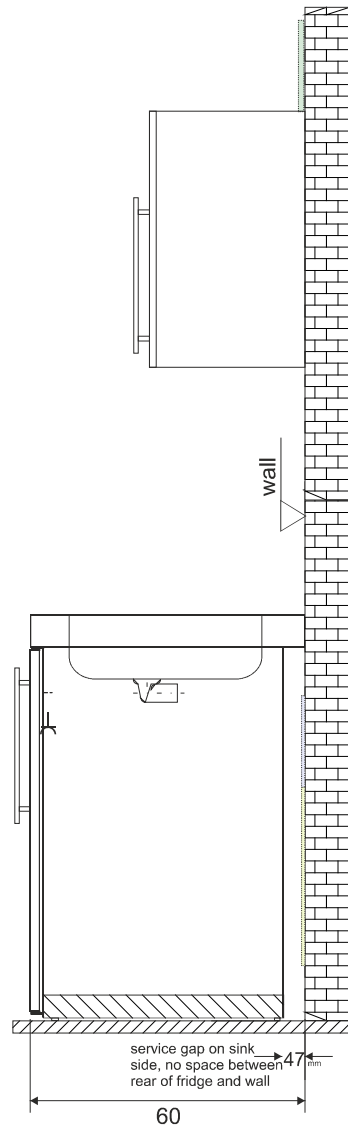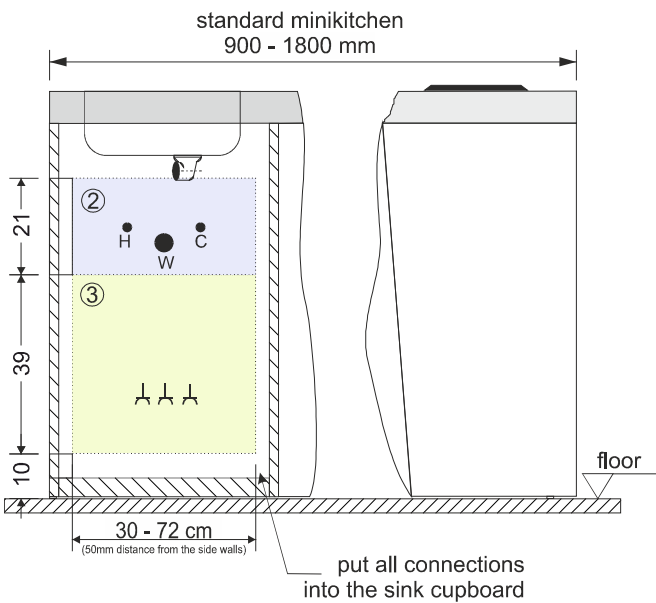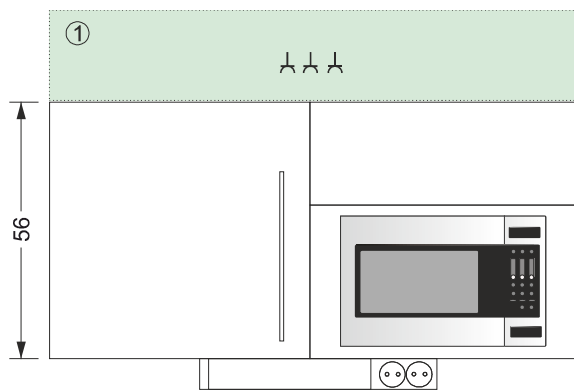

Important note regarding minikitchen connections:

- Bases of the minikitchens are delivered without rear panel
- Quantity of outlets according to quantity of electrical appliances
- All electrical appliances are 230V operated-
- Performance data of electrical appliances, see data sheets or current catalogue

Distances in the installation area:

- wall - drawer = 130 mm
- wall - dishwasher = 65 mm
- wall - 4* fridge Stengel (MK / MP) = 15-18 mm
- wall - 2* fridge Stengel (ME) = 50 mm
- wall - microwave = 240-280 mm
- wall - oven = 25 mm
- wall - shelf = 50 mm

- ① Recommended area for electrical connections of wall cupboards (e.g. microwave, light strip, extractor hood etc.)
- ② Recommended area for water connections
- ③ Recommended area for electrical connections for minikitchen (e.g. fridge, microwave, dishwasher, oven etc.)